 





BELT LOW loosen Screw #1, Tighten Screw #2




BELT POSITION CORRECT -Check that both adjustment screws are just snug against motor.

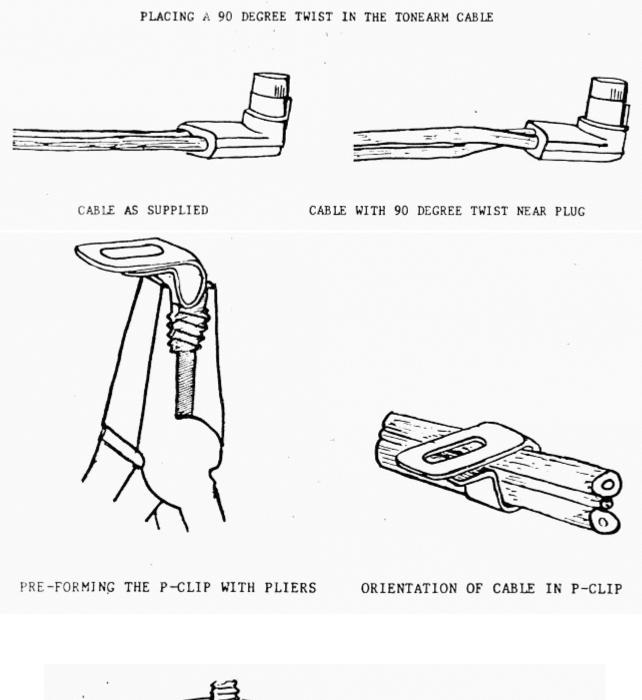

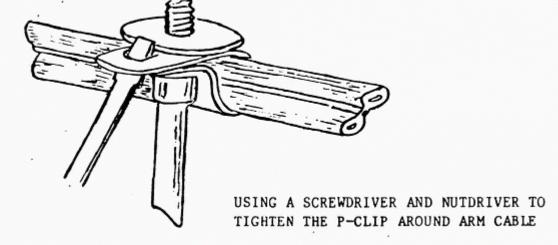

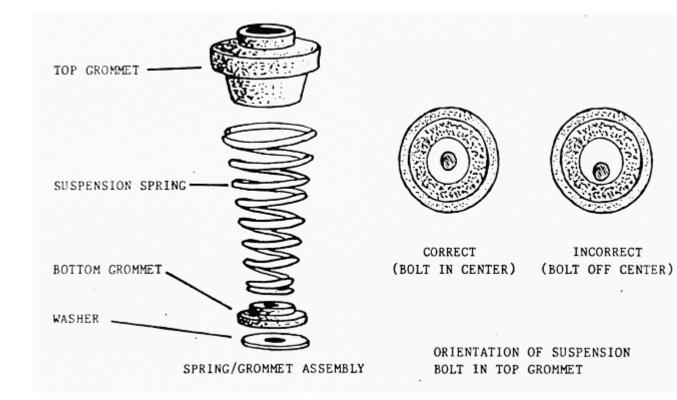

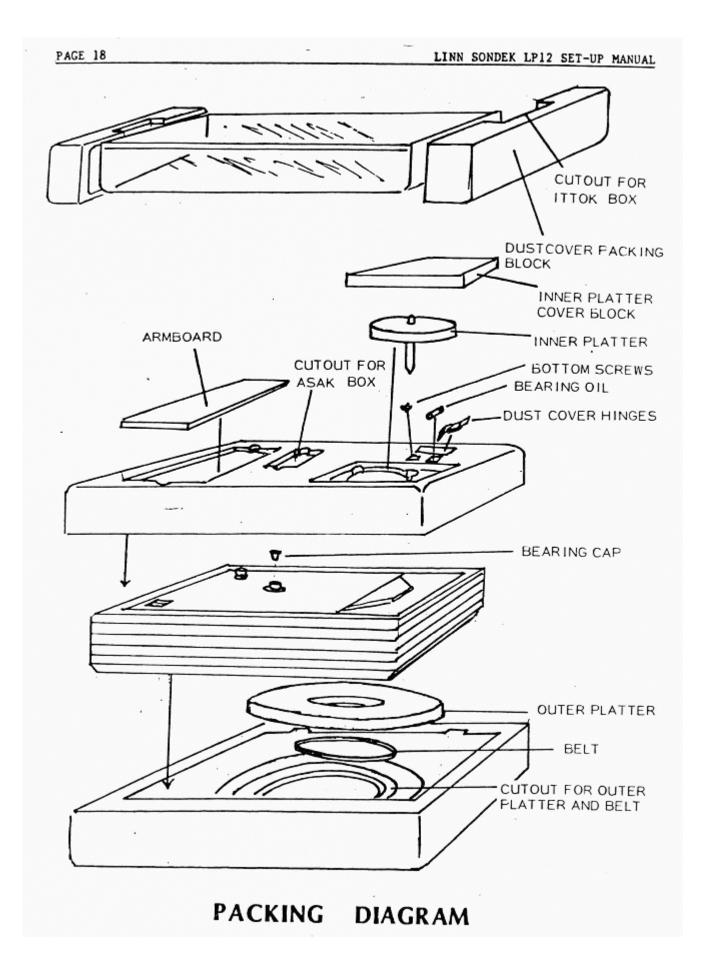

Notes: know notes ;^}