## Fitting The Wand Tonearm® to a Thorens TD160 family turntable (TD150/165 similar)

You should be able to use the Thorens arm lifter with The Wand Tonearm

To be read in conjunction with The Wand User Guide.

#### A; Remove the existing arm

**Step 1**; Remove the platter and headshell Disconnect from power!



**Step 3**; Remove the arm cable clamp and the white cable cover.



**Step 2**; Support the turntable upside down and remove the bottom cover.



Step 4; Unhook the lift mechanism



**Step 5**; Remove the lift mechanism and cable base (Four screws)




**Step 7**; Turn over and remove the arm.





**Step 6**; Remove the armrest (two screws)

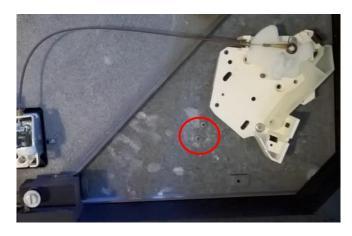

Hint; Improve your Thorens by adding damping material to the underside of the sheetmetal panels and the bottom cover while it is off. (but watch adding too much weight to the floating chassis part)



www.thewandtonearm.com
©Sept 2016 design **build** listen Ltd.

## Fitting The Wand Tonearm® to a Thorens TD160 family turntable (TD150/165 similar)

You may choose to use the Thorens arm lifter with The Wand To be read in conjunction with The Wand User Guide.

### **B**; Prepare The Wand Mounting

Step 1; Thread the lifter mechanism on the acrylic. (Ignore this step if you are not using the Thorens





**Step 2**; Screw through the lifter mechanism with two long screws.




Step 3; Stack the Steel plate on top



**Step 4**; Add the Wand mount & feed through the plinth (Wand Classic left, Wand Plus right below)



**Step 5**; Screw in but don't tighten. (Three screws)

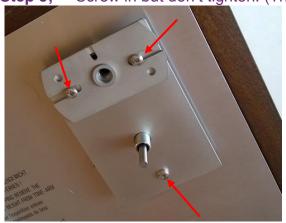




**Note**; If you want to route the wiring into the plinth. Feed through the slot in the Wand mount before adding screws. (But good to 'practice' other steps first)



www.thewandtonearm.com ©Sept 2016 design **build** listen Ltd.

# Fitting The Wand Tonearm® to a Thorens TD160 family turntable (TD150/165 similar) B; Fitting The Wand Tonearm Mount

**Step 1; Install the spindle** into mounting plate. Set the spindle height using the protractor. Lock in position using the nut (Classic) or grub screw (Plus).

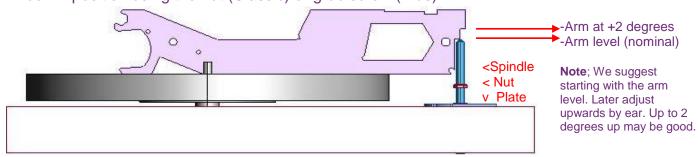


**Step 2**; Position the mount using the protractor (Slide back and forth)

Step 3; Tighten the three screws



**Step 4**; Add the Lifter (Wand Plus on left / Thorens for Classic on right.

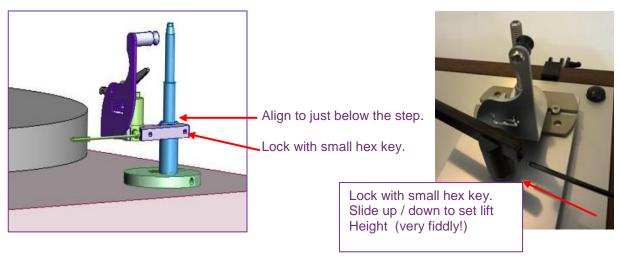

**Step 5**; Revert to main instructions for the remainder of the setup and enjoy!



"The improvement over the Thorens arm is astonishing. Detail, timing, but most of all soundstage depth." Richard, Dunedin, New Zealand

